

MERCURY FIRE RATED 3CCT IP65 DOWNLIGHT INSTRUCTIONS

Issue 01 10th August 2022


THANK YOU for buying this product. To help ensure it gives complete satisfaction please install it according to these instructions and then pass the instructions to the appropriate person for retention and future reference.

SAFETY This is a mains powered product. It is designed to be installed by suitably qualified personnel only and in accordance with the applicable building and electrical regulations. Before installation or maintenance the electrical supply to the product must be isolated.



INSTALLATION SUPPORT If installation advice or accessories are required, please also contact us at the above address. We will do our best to help. When reporting a suspected fault or seeking installation support the problem is likely to be resolved most quickly if you have full product details to-hand, as well as details of when and where it was purchased.

INSTALLATION

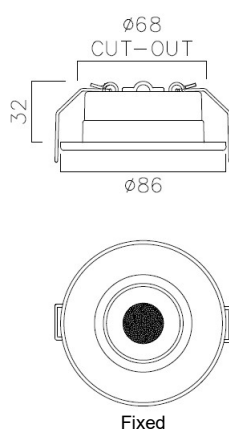

Decide mounting position in ceiling & cut the diameter round hole as shown above.

Note: Care should be taken when cutting the hole to avoid structures & to not exceed the specified cutting diameter so as not to expose the cut edge.

1. Pass the mains supply cable down through the hole & route to 3 pole connector block supplied with luminaire.
2. Unclip the 3-pole mains terminal block by pressing on the top
3. Squeeze on both pegs underside of the 3-pole mains connector to release the hinged terminal cover.
4. Terminate the mains supply cable ensuring correct polarity is observed. The terminal block allows for "loop in / loop out" connection.
5. locate the hinged terminal cover back into position and press down to securely clamp the cable in place.
6. Fit the luminaire into the hole by bending up the location springs & then pushing the luminaire up through the hole. The springs should then locate on top of the ceiling surface & pull the luminaire up to secure in position.
7. Twist and unlock the front bezel and remove to gain access to the 3CCT slider switch.
8. Set the required CCT 3000K, 4000K or 6000K using the slider switch.
9. Once the setup has been completed refit the front bezel opposite of 8 above.
10. Reconnect power supply & check for correct operation.

MAINTENANCE

1. Cleaning should be carried out at regular intervals so as not impair the photometric performance of the luminaire.
2. Failed lamps should be promptly replaced.